

INSTALLATION INSTRUCTIONS

SNUGGA Coupling



A repair clamp for sealing small pinhole leaks.

SN

REPAIR COUPLING

1




Make sure pipe is clean. Use sand cloth to clean surrounding area of pinhole(s), ensuring the surface is smooth.

2




Wrap rubber gasket around pipe, ensuring the center of the gasket is over the pinhole(s), as the split of the gasket needs to be 180° from pinhole(s).

3

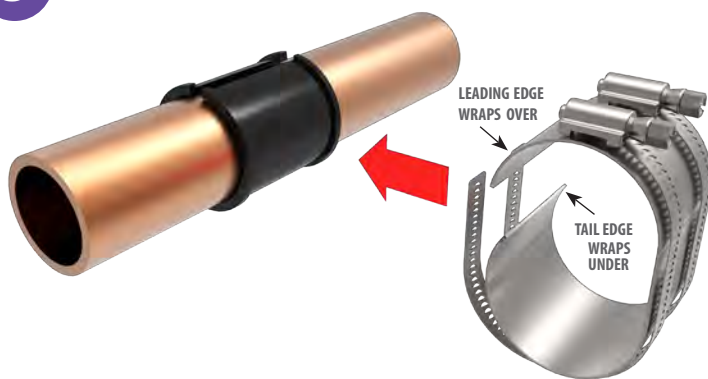

Place shield assembly over rubber gasket, ensuring leading edge of shield wraps over the tail edge, and ends of the gasket seal evenly.

4

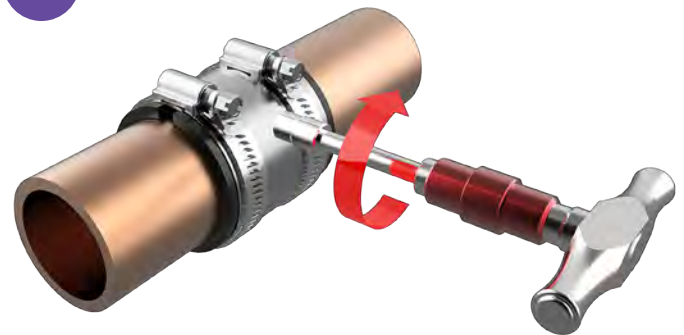

Ensure placement of clamp housing is over the gasket split. Tighten clamps to 60 in/lbs. of torque.



Mission Rubber Company LLC | 1660 Leeson Ln. | Corona, CA 92879 USA
toll free 800.854.9991 fax 800.637.4601

missionrubber.com

PART # 7063

REV. 8/15



MISSION
RUBBER COMPANY

connected, for good™